



200 AMP TO 100 AMP SUB-FEED INSTALLATION

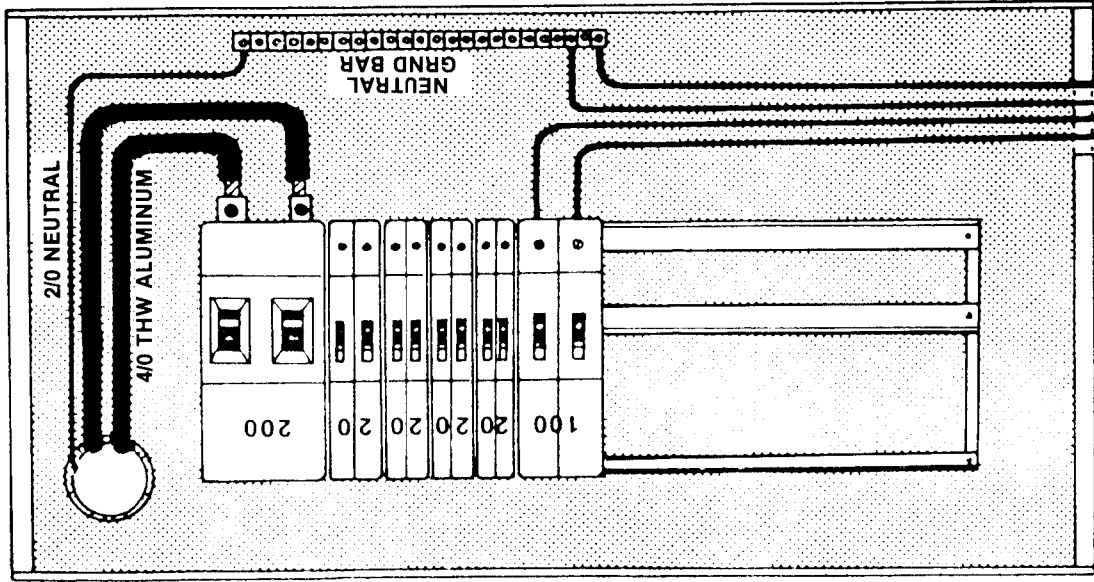


200-AMP MAIN

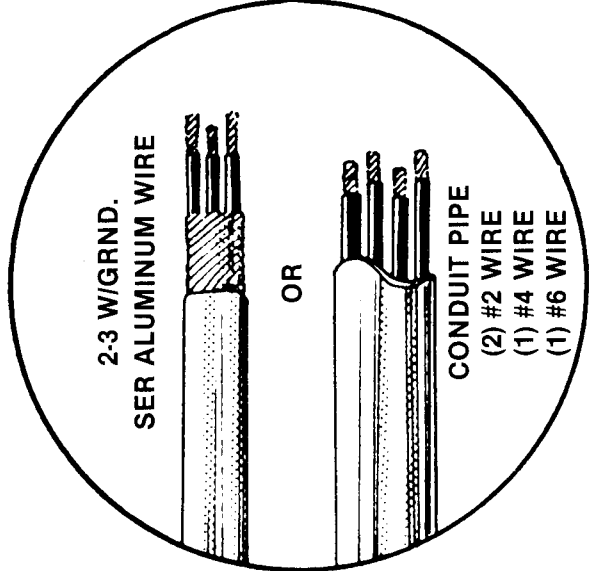

All aluminum wire should be liberally coated with corrosion inhibitor soon after the insulation is removed. Lugs and threads should also be coated to prevent metal seizure during the tightening process. Locknuts and fittings should be tight and secure. Any knockouts that were removed but the opening not used should be plugged with KO seals.

NOTE!
Ground strap or screw on sub-fed panel is removed when panels are grounded as shown.

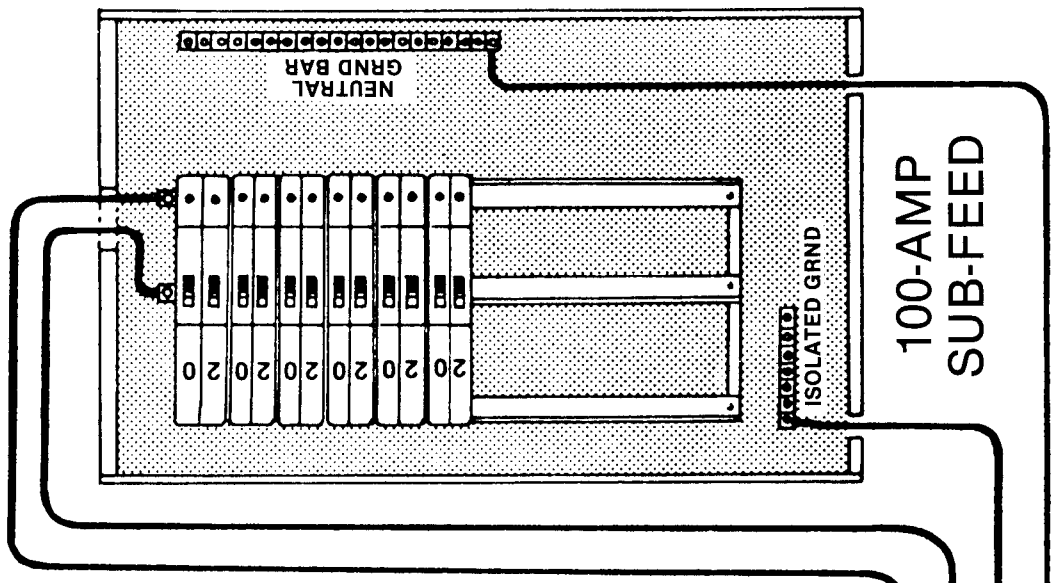

100-AMP SUB-FEED

SUB-FEED CONDUCTOR WIRE
SUB-FEED CONDUCTOR WIRE
GROUND WIRE
SUB-FEED NEUTRAL WIRE